


BELZONA REFURBISHES WALKWAYS

ID: 6178

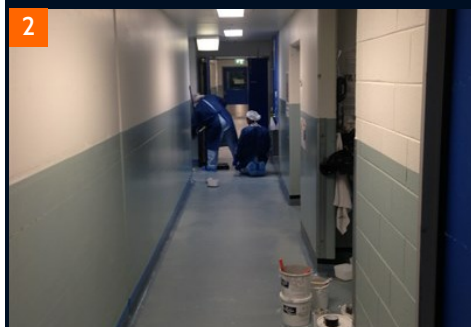

PROBLEM

The existing coating had started to break down creating both a trip hazard and a cleanliness issue for the facility.

APPLICATION SITUATION

Walkways between laboratories and holding cells at a medical research centre

APPLICATION METHOD

Application was carried out in accordance with Belzona System Leaflet FPA-8. The application was carried out over night. The coating was also applied partially up the walls to aid with cleaning of the floors.

BELZONA FACTS

The Belzona SG Laminate was chosen due to its solvent free nature and fast curing ability that allowed 2 coats to be applied in the short application window. The prime consideration was its ability to be applied to and bond onto the minimally prepared surface of the existing coating as mechanical preparation methods of any kind were prohibited.

INDUSTRY

Buildings & Structures

LOCATION

Medical Research Centre, Melbourne, Australia

APPLICATION DATE

November 2015

PRODUCTS

Belzona 5231 (SG Laminate)

SUBSTRATE

Coated concrete

PHOTOS

1. Floor prepared and masking complete
2. First coat underway
3. First coat almost complete
4. Close up of coating around drain

For more examples of Belzona Know-How in Action, please visit khia.belzona.com

Belzona products are manufactured under an ISO 9001 Registered Quality Management System.

www.belzona.com

