


BELZONA ENHANCES HOSPITAL STEPS

ID: 7701

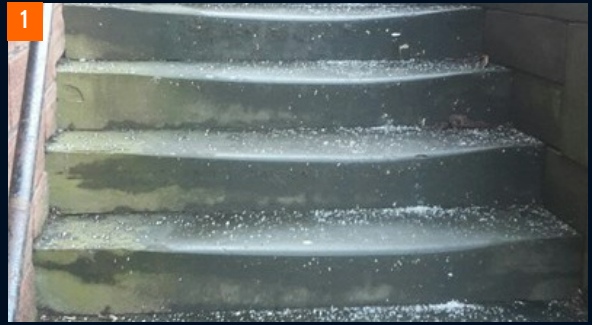

PROBLEM

A potential slip hazard had been noted on several sets of sandstone steps. Due to the enclosed area it was often damp or icy in the winter. A durable long lasting solution was required to ensure the slip hazard could not reoccur in the future.

APPLICATION SITUATION

Several staircases around a hospital in Glasgow has significantly worn away.

APPLICATION METHOD

The steps were marked out & prepared using a floor grinder. Belzona 5821 was then applied as a 1 coat system. Immediately following this Belzona 9211 aggregate was blinded into the coating & tamped down.

BELZONA FACTS

Removal of the steps would not have been an option. Non slip tapes have been found to have limited durability in this environment. The Belzona solution was completed within two weeks on seven sets of steps.

INDUSTRY

Buildings & Structures

LOCATION

Glasgow, UK

APPLICATION DATE

March 2018

PRODUCTS

Belzona 5821

Belzona 9211 (Supergrip Aggregate)

SUBSTRATE

Concrete

PHOTOS

1. Slippery steps before
2. Finished application
3. The steps revisited 7 years after the application

For more examples of Belzona Know-How in Action, please visit khia.belzona.com

Belzona products are manufactured under an ISO 9001 Registered Quality Management System.

www.belzona.com

